



Quick Manual
confocalDT IFD2412/2417
EtherCAT

Contents

General	3
Symbols Used.....	3
Warnings	3
Intended Use.....	4
Proper Environment.....	4
Glossary	4
Mechanical Fastening	5
Sensor.....	5
Controller.....	6
Electrical Connections	7
Supply Voltage.....	8
RS422 Communication.....	8
Sensor LEDs	9
Multifunction Button	10
Start of Measuring Range	10
Initial Operation	11
Switch between EtherCAT and Ethernet Setup Mode	12
Access via Web Interface.....	13
Positioning the Target	14
Presets, Setups, Measurement Configuration, Signal Quality ...	15

MICRO-EPSILON

MESSTECHNIK

GmbH & Co. KG

Koenigbacher Str. 15

94496 Ortenburg / Germany

Tel. +49 (0) 8542 / 168-0

Fax +49 (0) 8542 / 168-90

e-mail info@micro-epsilon.com

www.micro-epsilon.com

EtherCAT 

You can find more information about the measuring system in the operating instructions. They are available online at:

<https://www.micro-epsilon.com/download-file/man--confocalDT-2411-2412-2416-2417-EtherCAT--en.pdf>

Checking the Video Signal, Peak Selection	17
Distance Measurement with Website Display	18
One-Sided Thickness Measurement, Transparent Target	20
Preset Selection	20
Material Selection.....	20
Video Signal.....	21
Measurement Chart for Thickness Measurement	22
Layer Thickness Measurement, Transparent Target	23
Preset Selection	23
Peak Selection	23
Material Selection.....	23
Switch between Ethernet Setup Mode and EtherCAT	24
Data Output Industrial Ethernet	25
EtherCAT	25
Preliminary Remarks.....	25
Parameter Setting via EtherCAT	25
Saving the Settings, Continuing EtherCAT Mode	26
Service, Repair	27
Disclaimer	27
Decommissioning, Disposal	28

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.



General

Symbols Used

The following symbols are used in this document:



Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Indicates a situation that may result in property damage if not avoided.



Indicates a user action.



Indicates a tip for users.

Measurement

Indicates hardware or a software button/menu.

Warnings



Connect the power supply and the display/output device according to the safety regulations for electrical equipment.

> Risk of injury, damage to or destruction of the controller

When all interfaces are used, the controller heats up to more than 50 °C.

> Risk of injury



Avoid shocks and impacts to the sensor and controller.

> Damage to or destruction of the sensor and/or controller

The supply voltage must not exceed the specified limits.

> Damage to or destruction of the sensor and/or controller

Protect the cables against damage.

> Failure of the measuring device

Intended Use

- The measuring system is designed for use in an industrial environment. It is used for
 - displacement, distance, movement and thickness measurement,
 - measuring the position of parts or machine components
 - The measuring system must only be operated within the limits specified in the technical data.
- ➡ The measuring system must only be used in such a way that no persons are endangered or machines are damaged in the event of malfunction or total failure of the controller.
- ➡ Take additional precautions for safety and damage prevention in case of safety-related applications.

Proper Environment

	Sensor	Controller
Protection class	IP64, front side	IP40
Operating temperature range	+5 ... +70 °C	+5 ... +50 °C
Temperature range (storage)	-20 ... +70 °C	
Humidity	5 ... 95 % (non-condensing)	
Ambient pressure	Atmospheric pressure	
Shock (DIN-EN 60068-2-27)	15 g / 6 ms in XY-axis, 1000 shocks each	
Vibration (DIN-EN 60068-2-6)	2 g / 20 ... 500 Hz in XY-axis, 10 cycles each	

Glossary

SMR Start of measuring range

MMR Mid of measuring range

MR Measuring range

EMR End of measuring range

Minimum target thickness see Technical Data, Operating Instructions

Maximum target thickness Sensor measuring range x Refractive index of target

Mechanical Fastening

Sensor

The optical sensors operate in the nanometer range. Observe the maximum tilt angle between sensor and target.

i Ensure careful handling during installation and operation!

The dimensional drawings for the IFS240x series sensors, their mounting, and the MA240x series mounting adapters are summarized in a separate document. You can find these online at:

<https://www.micro-epsilon.com/download-file/set--confocalDT-Sensoren--en.pdf>



Fasten the cylindrical sensors with a circumferential clamp. This type of sensor mounting ensures the highest level of reliability because the sensor's cylindrical housing is clamped over a relatively large area. This is absolutely necessary in difficult installation situations, such as on machines, production lines, etc.





Example of a circumferential clamp with mounting adapter MA2400-27

Controller


The IFC2412/2417 controller can be mounted, e.g., in a control cabinet using a top-hat rail TH 35 according to DIN EN 60715.

i When attaching the controller, ensure that no connections, operating or display elements are covered. The minimum distance between adjacent controllers is 10 mm.

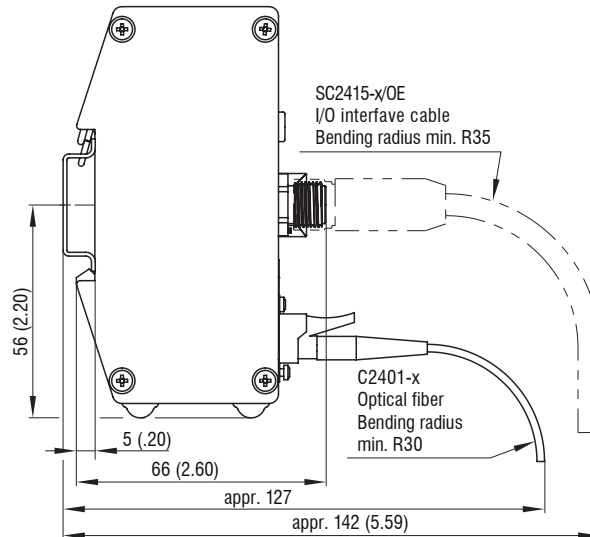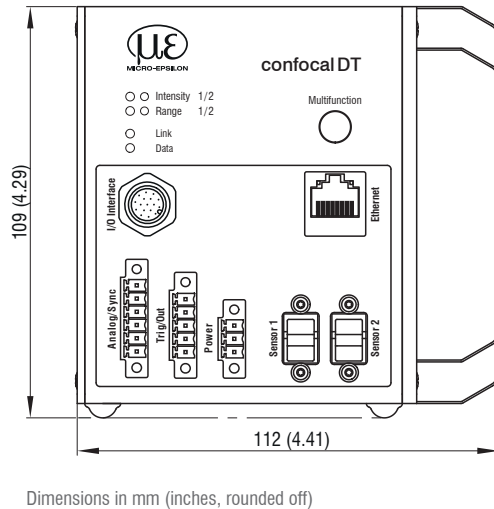

Dimensional drawing IFC2412/2417

Electrical Connections

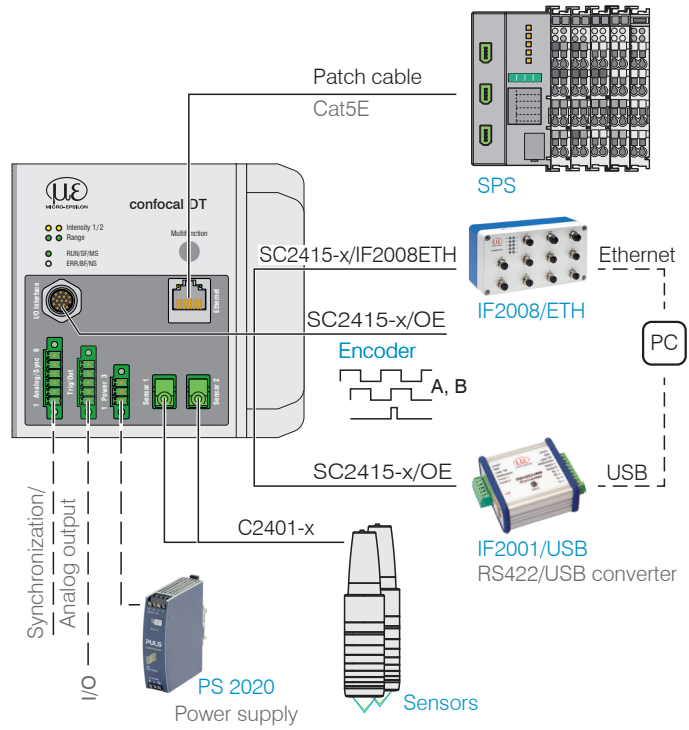


Characteristics SC2415-x/OE signal line:

- RS422
- Encoder

The SC2415-x/OE cable is not in delivery.

17-pin connector, M12	SC2415-x/OE wire color	IFC2412/2417	
		Standard	Alternative
3	Black	Data Tx -	Encoder 2B -
5	Red	Encoder 2Ref+	Encoder 2Ref+
8	Grey	Encoder 1B+	
9	Green	Encoder 1Ref+	
10	Brown	Data Rx+	Encoder 2A+
11	White	Data Rx -	Encoder 2A -
12	Red/Blue	Encoder 1A -	
13	Purple	Data Tx +	Encoder 2B+
14	Blue	Encoder 2Ref -	Encoder 2Ref -
15	Pink	Encoder 1B -	
16	Yellow	Encoder 1Ref -	
17	Grey/Pink	Encoder 1A+	

Pin assignment SC2415-x/OE

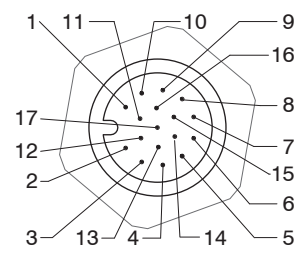

The GND connections are not electrically separated.

17-pin controller male connector, pin side


Supply Voltage

Nominal value: 24 V DC (20 ... 28 V)

Power consumption:

< 9 W (IFC2412),

< 12 W (IFC2417)

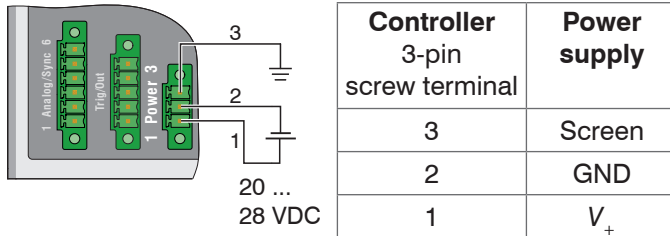

Voltage supply only for measuring devices, not to be used for drives or similar sources of impulse interference at the same time. MICRO-EPSILON recommends using an optional available power supply unit PS2020 for the controller.

- Only turn on the power supply after wiring has been completed.
- Connect the inputs Pin 1 and Pin 2 at the controller with a 24V power supply.

RS422 Communication

In addition to EtherCAT, the controller also supports serial communication via RS422. Serial communication is possible with SC2415-x/OE cables.

Properties: Differential signals according to EIA-422, galvanically connected to the supply voltage.

- Use a shielded cable with twisted wires. Cable length less than 30 m.
- Connect the ground connections.

Controller 12-pin connector	Signal	SC2415-x/OE	IF2001/USB
3	TX -	Black	RX -
13	TX +	Purple	RX +
10	RX +	Brown	TX +
11	RX -	White	TX -
Housing	Shield	Cable shield	---

The IFC2412/2417 controllers support one encoder. Without serial communication via RS422 the controllers support up to three encoders.

Sensor LEDs

RUN	green	Off	Slave is in the "Init" status
	green	flashes evenly	Slave is in the "Pre-Operational" status
	green	flashes briefly	Slave is in the "Safe-Operational" status
	green	flashes quickly	Slave is in the "initialization" or "bootstrap" status
	green	lights up	Slave is in the "Operational" status
ERR	red	Off	No error
	red	flashes evenly	Invalid configuration
	red	flashes briefly	Unwanted status change
	red	flashes twice	Timeout of the Application watchdog
	red	flickers	Boot error
	red	lights up	Timeout of the PDI watchdog


● RUN/SF/MS
● ERR/BF/NS

LED	Color	Status	Meaning
Intensity	red	flashes	Dark signal acquisition in progress
	red	lights up	Signal saturated
	yellow	lights up	Signal too low
	green	lights up	Signal OK
Range	red	flashes	Dark signal acquisition in progress
	red	lights up	No target present, outside of measuring range
	yellow	lights up	Target close to mid of measuring range
	green	lights up	Measuring object within the measuring range


● ● Intensity 1/2
● ● Range 1/2

Multifunction Button

The `Multifunction` button is assigned multiple functions. As default, the button is assigned the dark reference function.

<ul style="list-style-type: none"> ● Intensity 1/2 ○ Range 1/2 ● RUN/SF/MS ● ERR/BF/NS 	 Multifunction	Function	Dark reference	<i>Starts dark referencing</i>
			Factory setting	Reset the device and measurement settings to factory settings.


The selected function is indicated by the flashing/illuminated Range and Intensity LEDs.

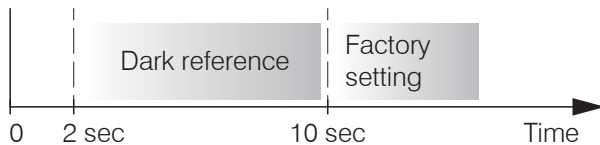

Multifunction *button actuation time*

The `Multifunction` button is not assigned a key lock in the factory. Optionally, you can deactivate or lock the `Multifunction` button, see the operating instructions for the controller. With the `Multifunction` key you can also change the operation mode. For details, refer to section `Initial Operation` or `Switch between EtherCAT and Ethernet Setup Mode`.

Start of Measuring Range

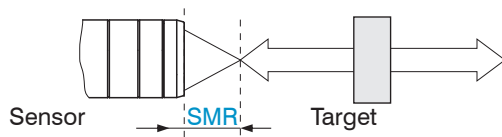

An offset distance (SMR) between the sensor and the target must be kept.

Start of measuring range (SMR), the shortest distance between the front surface of the sensor and the target

Initial Operation

- The measuring system is ready for operation approx. 3 s after applying the supply voltage.
- ! To ensure precise measurements, let the measuring system warm up for about 50 minutes.

The controller starts in the last stored operating mode. Default is EtherCAT.

Ethernet-Setup-Mode

- Programming via web interface,
- no EtherCAT

➡ Switch to the Ethernet setup mode.

Details can be found in section `Switch between EtherCAT and Ethernet Setup Mode`.

- ➡ Connect the controller and the PC with a LAN cable.
- ➡ Start your web browser and type the default IP address 169.254.168.150 of the controller into the address bar.

Alternative communication with the controller

RS422 Communication

- Programming via web interface;
- programming on command level e.g. with Telnet,
- no parallel output of measurement data via EtherCAT and RS422 possible

➡ Connect the controller, e.g. via an IF2001/USB RS422 converter from Micro-Epsilon via USB to a PC.

➡ Start the `sensorTOOL` program.

Download at <https://www.micro-epsilon.de/download/software/sensorTOOL.exe>.

➡ Click the `Sensor` button.

The program will now search for connected controllers.

➡ Select a desired sensor. Click the `Open Website` button.

Ethernet over EtherCAT (EoE)

- Programming via web interface;
- programming on command level e.g. with Telnet,
- Parallel programming and measurement

➡ Enable the EoE in your PLC software.

➡ Assign each a virtual MAC address and an IP address to the controller with your EtherCAT master.


Saved settings remain in the sensor remanently across interfaces

Switch between EtherCAT and Ethernet Setup Mode

The controller starts in the last stored operating mode. Factory setting is EtherCAT. Access via Ethernet is possible in the Ethernet setup mode.

➡ Press and hold the Multifunction button on the controller before switching on the power supply on the controller. Release the button again as soon as the Intensity LED flashes yellow. Press the button again for approx. 10 to 15 seconds until the Intensity LED flashes red.

Within the time $t_2 \dots t_3$, the red flashing with 8 Hz starts after 10 seconds. The key must be released again after 15 seconds at the latest. When the Multifunction key is released at the latest at time t_3 , the Intensity LED starts to flash yellow at 8 Hz.

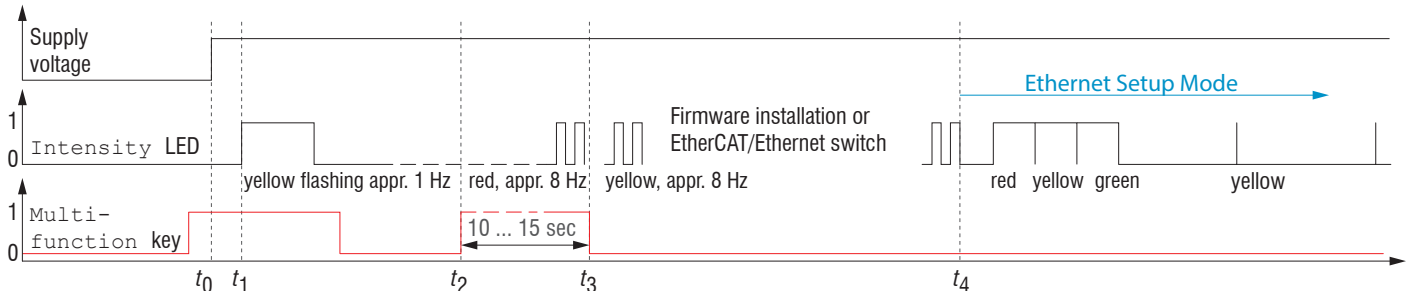

Flowchart for starting a controller in Ethernet setup mode

After completion of the firmware installation/switch, the controller reboots at time t_4 .

t_0 : Supply voltage is applied

t_1 : The Intensity LED starts flashing yellow, the Multifunction button can be released

t_2 : Within 15 sec. ($t_2 - t_1$), press Multifunction button again and hold for further 10 ... 15 sec. ($t_3 - t_2$)

$t_3 \dots t_4$: Switches from EtherCAT to Ethernet Setup Mode, duration max. 1 min.

t_4 : Controller starts in Ethernet setup mode, the Intensity LED lights up briefly at intervals of approx. 1 sec.

Access via Web Interface

➡ Start the web interface of the controller, see section *Initial Operation*.

Interactive web pages you can use to configure the controller are now displayed in the web browser. The controller is active and supplies measurement values. The web interface does not guarantee real-time measurements. The currently running measurement can be controlled using the function buttons in the **Chart type** section.




First page after web interface has been accessed in Ethernet mode

For configuration, you can switch between the video signal and a display of the measured values over time. The appearance of the websites depends on the functions. Dynamic help texts with excerpts from the operating instructions supports you during controller configuration.

• Depending on the selected measuring rate and the PC used, measured values may be reduced in the display. That is, not all measured values are transmitted to the web interface for display and saving.

The horizontal navigation includes the functions below:

- Home. The web interface automatically starts in this view with Measurement Chart, Measurement configuration and Signal quality.
- Settings. Controller parameters configuration such as triggering, measuring rate and zero setting/mastering.
- Measurement chart. Measurement chart or video signal display.
- Info. Includes information about the controller, such as measuring range, serial number and software status.

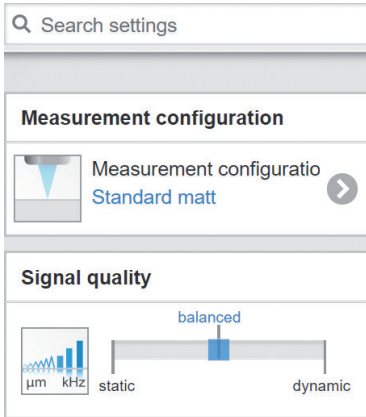


The vertical navigation is contextual to the selection in the horizontal navigation and contains the following functions for the Home menu:

- The **Search settings** function permits time-saving access to functions and parameters.
- **Measurement configuration**. Allows a selection of predefined measurement settings.
- **Signal quality** By mouse click it is possible to switch between three predefined basic settings for the measuring rate and the averaging.

Positioning the Target

➡ Position the target as centrally as possible within the measuring range.

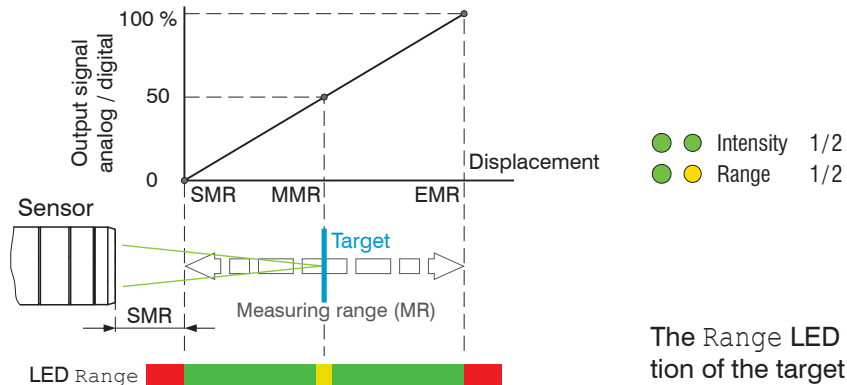


Range LED	
Red	No target present or target outside of measuring range
yellow	Target close to mid of measuring range
green	Measuring object within the measuring range

The Range LED on the front of the controller indicates the position of the target relative to the sensor.

Presets, Setups, Measurement Configuration, Signal Quality

Definition

- **Preset:** Manufacturer-specific program with settings for frequent measurement tasks; cannot be overwritten
- **Setup:** User-specific program with relevant settings for a measurement task
- **Initial setup at boot (controller start):** a favorite can be selected from the setups, which is automatically activated at controller start. If no favorite is determined from the setups, the controller activates the *Standard* preset at startup.

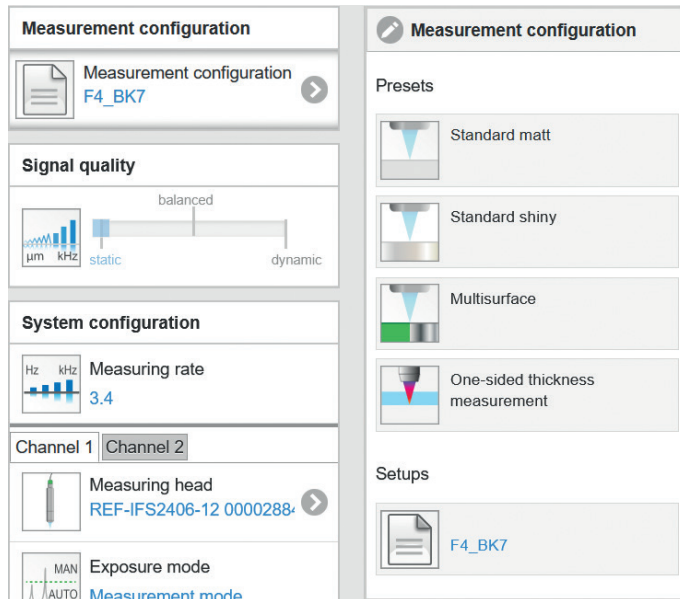

Upon delivery of the controller from the factory

- the presets *Standard*, *Standard shiny*, *Multisurface* and *One-sided thickness measurement* are possible
- for the IFD2417 controller, the presets *Multilayer air gap* and *Multilayer laminated glass* are available.
- no setup is available.

You can select a preset in the tab

Home > Measurement configuration






 
You can select a setup in the tab

Home > Measurement configuration or Settings
in the System settings > Load & save menu





A setup can be stored permanently in the controller.

- **I** The IFC2412/2417 controllers process two sensor signals in parallel. Accordingly, several parameters for channels 1 and 2 must be set separately in the *Settings* menu, such as the material selection.

Presets allow a quick start into the individual measurement task. Basic features such as peak and material selection and the calculation functions are already set in the presets to match the target surface.

 <p>Standard matt</p>	<p>Distance measurement, e.g., for ceramic material, non-transparent plastics. Highest peak, averaging, distance calculation.</p>	 <p>One-sided thickness measurement</p>	<p>One-sided thickness measurement, e.g., for glass, BK7 material. First and second peak, averaging, thickness calculation.</p>
 <p>Standard shiny</p>	<p>Distance measurement, e.g., for metal, polished surfaces. Highest peak, Median over 5 values, distance calculation.</p>	 <p>Multilayer air gap</p>	<p>One-sided thickness measurement¹ against glass, 1st layer BK7, 2nd layer vacuum, first and second peak, 3 measured values, median over five values, thickness calculation.</p>
 <p>Multisurface</p>	<p>Distance measurement, e.g., for PCBs, hybrid materials. Highest peak, Median over 9 values, distance calculation.</p>	 <p>Multilayer laminated glass</p>	<p>Layer thickness measurement¹ against laminated glass e.g. windshield, 1st layer BK7, 2nd layer PC, 3rd layer BK7, first and second peak, 4 measured values, thickness calculation.</p>

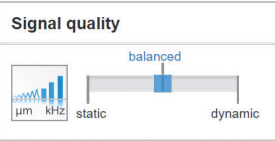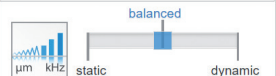For all presets, the measurement task can be individually adapted via the Signal quality slider. Reducing the measuring rate increases the exposure time for the line and thus improves the measurement quality.

 <p>Signal quality</p>	Measuring rate ²	Averaging ²	Description
	0.2 kHz	Static Moving, 128 values	Three predefined basic settings (Static, Balanced and Dynamic); a change via mouse click is immediately visible in the diagram and the system configuration.
	1 kHz	Balanced Moving, 16 values	<p>i If the controller starts up with a user-defined measurement setting (setup), the signal quality cannot be changed.</p>
	5 kHz	Dynamic Moving, 4 values	


1) Possible in IFC2417

2) Values apply to the Standard and One-sided thickness measurement presets.

Checking the Video Signal, Peak Selection

The video signal shows the determined reflections at the measuring object as a raw signal. The peaks are counted starting at the start of the measuring range toward the end of the measuring range. The corresponding measured value is marked by a vertical line (peak marking).

➡ Go to the **Measurement** chart menu. Display the video signal with **Video**. Adjust the settings for the exposure mode and measuring rate parameters.

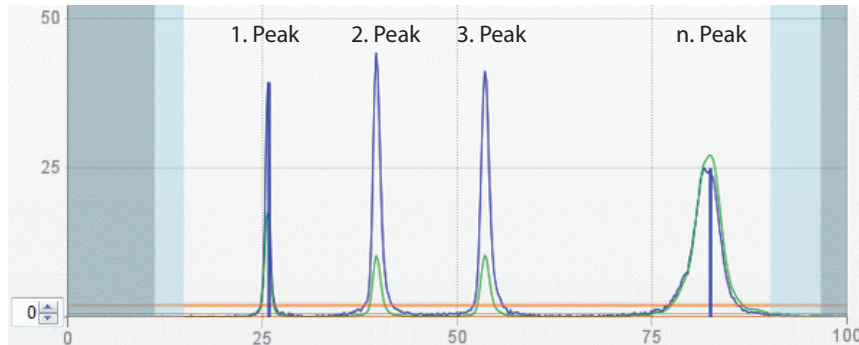

The selection of peaks dictates which region in the signal is used for the distance or thickness measurement. For a measuring object consisting of several transparent layers, use the refractive index correction to compensate for the distance measurement errors caused by optical factors, see operating instructions.

Video signal of transparent measuring object with four peaks (optical boundary areas) in the measuring range

		IFC2412	IFC2417
1 measurement	first peak / highest peak / last peak	•	•
2 measurement values	first and second peak / first and last peak / second to last and last peak / highest and second highest peak	•	•
3 up to 6 measurement values	All peaks above the intensity threshold are evaluated in ascending distance order.		•

The **Standard**, **Standard shiny** and **Multisurface** presets use the highest peak. The preset **One-sided thickness measurement** uses the 1. and 2. peak for the calculation of the measured value.

➡ Go to the **Settings > Data acquisition > Channel 1/2 > Number of peaks** menu to select a different peak.

Distance Measurement with Website Display


➡ Align the sensor perpendicularly to the object to be measured.

➡ Then, move the sensor (or the target) closer and closer to the start of the measuring range of the relevant sensor.

As soon as the object is within the measuring field of the sensor, the controller's Range LED lights up (green or yellow). Alternatively, you can watch the video signal.



Measurement (*distance measurement*) web page


- 1 **Stop** pauses the chart; you can still use the data selection and zoom functions. **Save** opens a Windows selection dialog for the file name and storage location to save the last 10,000 values in a CSV file (separation using semicolon).
- 2 In the left-hand window, the signals to be displayed can be switched on or off during or after the measurement. Inactive curves are grayed out and can be added by clicking on the check mark. The changes in the signal selection become effective when you save the settings.
You can show or hide the individual signals using the eye symbols . The calculation continues in the background.
 - 01SHUTTER: exposure time
 - 01xINTENSITY: Signal quality of the underlying peak in the video signal
 - 01DIST: Distance signal curve over time
- 3 To scale the axis in the graph for the measured values (y-axis), you can use **Auto** (= automatic scaling) or **Manual** (= manual scaling).
- 4 Quickly save to the last saved parameter set (setup). The button is accessible on every settings page.
- 5 The current values for distance, exposure time, current measuring rate and time stamp are shown in the text boxes above the graph. Errors are also displayed.
- 6 **Mouseover** function. When the chart has been stopped and you move the mouse over the graph, points on the curve are marked with a circle and the associated values are displayed in the text boxes above the graph. The intensity bars are also updated.
- 7 The peak intensity is displayed as a bar chart.
- 8 **Scaling the x-axis**: During an ongoing measurement, you can use the left-hand slider to enlarge the entire signal (zoom). The time range can also be defined using an input field under the time axis. When the chart has been stopped, the right-hand slider can also be used. You can also move the zoom window with the mouse in the center of the zoom window (four-sided arrow).
- 9 The two buttons allow you to switch between the video signal and the display of the measured value.

One-Sided Thickness Measurement, Transparent Target

The controller evaluates two signals reflected on the surfaces. Based on these two signals, the controller calculates the distances from the surfaces and, from this, derives the thickness.

➔ Align the sensor perpendicularly to the object to be measured. Make sure that the target is approximately in the mid of the measuring range ($SMR + 0.5 \times MR$).

i The light beam must strike the surface of the object at a perpendicular angle. Otherwise, measurements might be inaccurate.

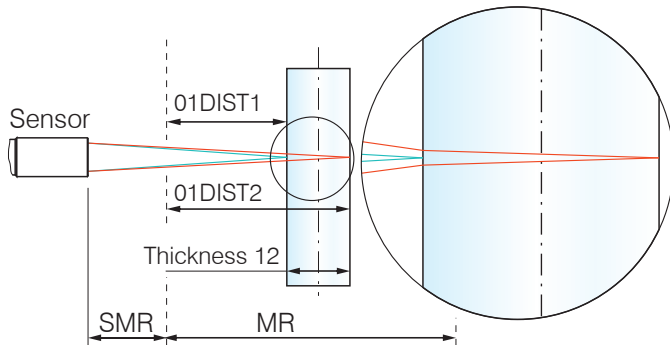

One-sided thickness measurement for a transparent target

Preset Selection

- ➔ Switch to the Home menu.
- ➔ Select One-sided thickness measurement in the Measurement configuration menu.

This presetting prompts the controller to use the first and second peak in the video signal for the thickness calculation.

Material Selection

Specifying the material is essential for calculating a correct thickness value. To compensate for the spectral change of the index of refraction, at least three refractive indices at different wavelengths or a refractive index and the Abbe number must be known.

The material table includes predefined materials.


- ➔ Switch to the Settings > Data acquisition > Channel 1/2 > Material selection menu.
- ➔ Select the material of the target for Layer 1.

Video Signal



If a surface of the target lies outside the measuring range, the controller will send only one signal for the displacement, intensity and center of gravity. This may also occur if a signal is below the detection threshold. Two boundary surfaces are active when the correct thickness of a transparent material is measured. As a result, two peaks are visible in the video signal.



Video signal (*thickness measurement*) web page

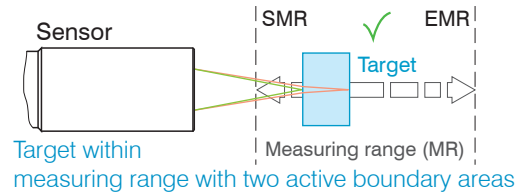

Measurement arrangement for thickness measurement

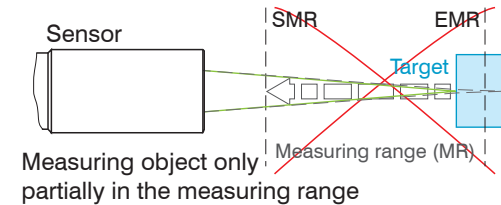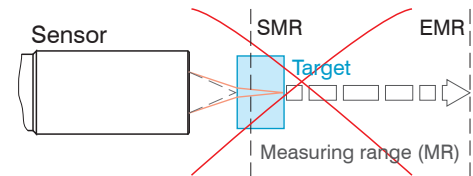


No thickness measurement possible

Measurement Chart for Thickness Measurement

➔ Switch to the **Measurement** chart tab and select **Mess** as the chart type.


The website displays the distances and thicknesses graphically and numerically, according to the **Signal** selection.

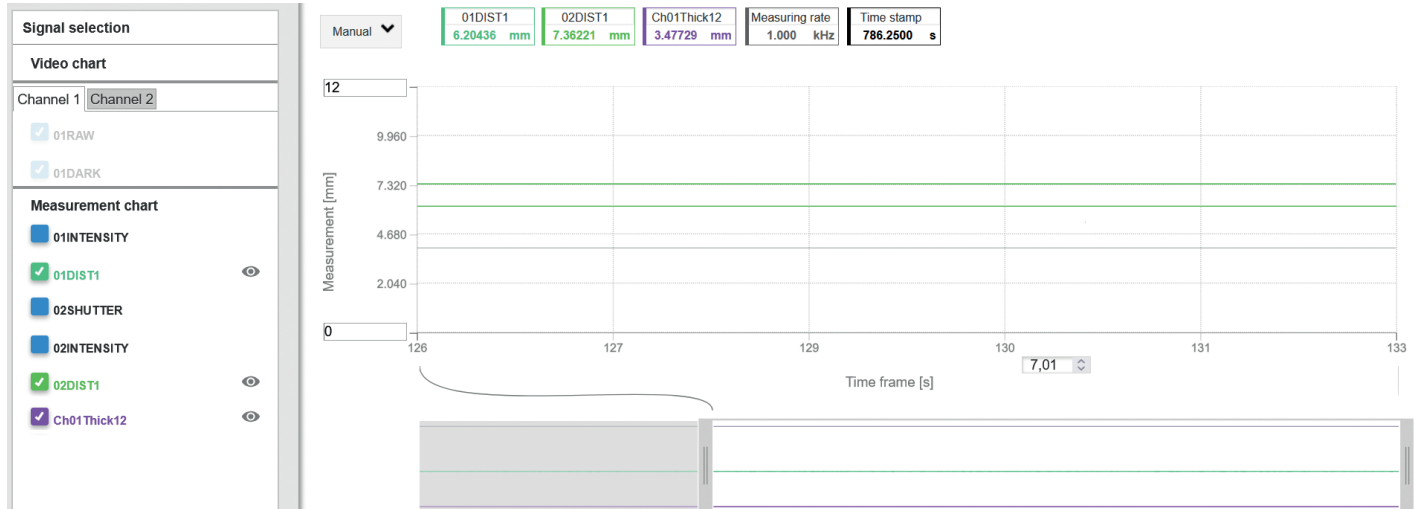

Layer Thickness Measurement, Transparent Target

This function is available with the IFC2417 controller. The controller evaluates signals reflected at the surfaces. The controller uses the max. 6 possible signals to calculate the distances from the surfaces and from this the thickness.

- ➔ Align the sensor perpendicularly to the object to be measured. Make sure that the target is approximately in the mid of the measuring range (SMR + 0.5 x MR).

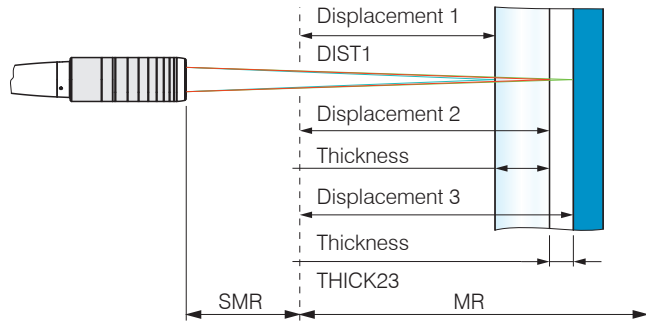

Measurement of a transparent target with multiple layers


Preset Selection

- ➔ Switch to the Home menu.
- ➔ In the Measurement configuration menu, select the Multilayer air gap or Multilayer laminated glass preset.

Peak Selection

The number of peaks is equivalent to the number of transitions between different materials of a target within the measuring range.

- ➔ Switch to Settings > Data acquisition > Channel 1/2 > Number of peaks and select the required peaks.

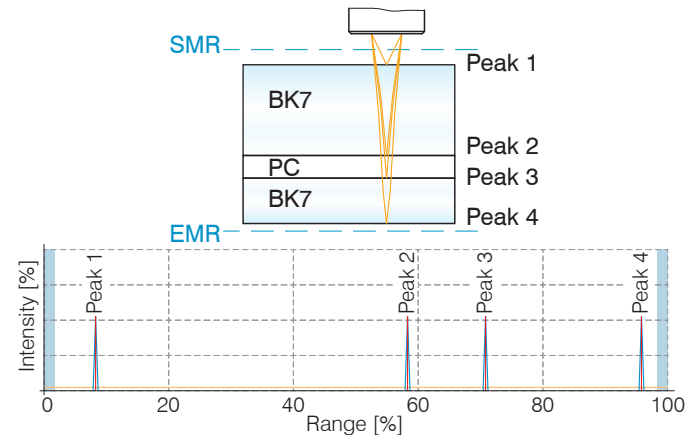

Transparent target with three layers

Material Selection

Specifying the material is essential for calculating a correct thickness value. The material table includes predefined materials.


- ➔ Assign the materials to the individual layers.

Switch between Ethernet Setup Mode and EtherCAT

The controllers start in the last stored operating mode. With the Multifunction button, you can set the controller to the EtherCAT operating mode.

➡ Press and hold the Multifunction button on the controller before switching on the power supply on the controller. Release the button again as soon as the Intensity LED flashes yellow. Press the button again for approx. 10 to 15 seconds until the Intensity LED flashes red.

Within the time $t_2 \dots t_3$, the red flashing with 8 Hz starts after 10 seconds. The key must be released again after 15 seconds at the latest. When the Multifunction key is released at the latest at time t_3 , the Intensity LED starts to flash yellow at 8 Hz.

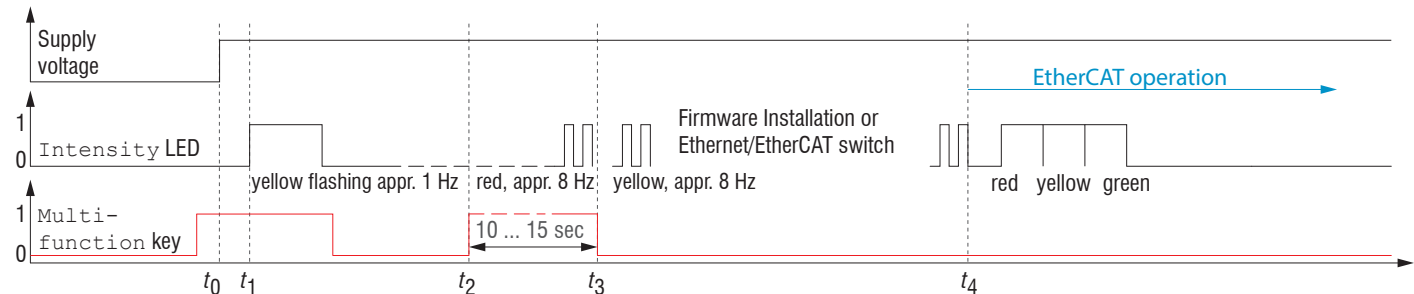

Flowchart for starting a controller in EtherCAT mode

After completion of the firmware installation/switch, the controller reboots at time t_4 .

- t_0 : Supply voltage is applied
- t_1 : The Intensity LED starts flashing yellow, the Multifunction button can be released
- t_2 : Within 15 sec. ($t_2 - t_1$), press Multifunction button again and hold for further 10 ... 15 sec. ($t_3 - t_2$)
- $t_3 \dots t_4$: Switches from Ethernet Setup Mode to EtherCAT, duration max. 1 min.
- t_4 : Controller starts in EtherCAT mode.

Data Output Industrial Ethernet

Signal name	Ethernet, min	Ethernet, max	Scaling	Unit	IFC2412	IFC2417
0xRAW (512 x 16Bit)	0	4095	value / 4096 * 100	%	x	x
0xSHUTTER	0	UINT32_MAX	value / 36	μ s	x	x
01ENCODER1 ... 3	0	UINT32_MAX	value	Encoder ticks	x	x
0xINTENSITY[1..6]	0	0x3ffffff	(value & 0x7ff) / 1024 * 100	%	x	x
0xDIST[1..6]	INT32_MIN	0x7fffff	value / 1000000	mm	x	x
01SYMM[1..6]	INT32_MIN	INT32_MAX	value / 262144	Center position	x	x
MEASRATE	4500	360000	36000 / value	kHz	x	
MEASRATE	1440	360000	36000 / value	kHz		x
TIMESTAMP	0	UINT32_MAX	value	μ s	x	x
COUNTER	0	UINT32_MAX	value		x	x
*_MIN / *_PEAK / *_MAX	INT32_MIN	0x7fffff	identical with 0xDIST*	mm	x	x

Excerpt output values

EtherCAT

Preliminary Remarks

The controller starts with the last stored operating mode. Default is EtherCAT. You can program the controller via SDOs. In Ethernet setup mode or with active EoE, programming is alternatively possible via Telnet or the web interface, see the sections Initial Operation, Distance Measurement and One-sided thickness measurement.

Parameter Setting via EtherCAT

The acyclic programming of the controller is done in EtherCAT via the SDOs of the CANopen protocol. For details about reading and changing SDOs, please refer to the description of your EtherCAT master.

An overview of the available SDOs can be found in the operating instructions of the controller.

Saving the Settings, Continuing EtherCAT Mode

Programming via SDOs	Programmierung über Webinterface	
	Ethernet-Setup-Mode	Ethernet over EtherCAT (EoE)
<p>Changes to the device settings: ➡ Save the settings with SDO 0x3020:002.</p> <p>Changes to the measurement settings: ➡ Save the settings with SDO 0x3022:003.</p>	<p>- Programming via web interface</p> <p>➡ Go to Settings > System settings > Load & Save or click the Save settings button.</p> <p>➡ Go to Settings > System settings > Boot mode. Select the entry Industrial Ethernet (EtherCAT).</p> <p>The controller disconnects from the browser and boots automatically with the EtherCAT firmware. The boot process can take up to one minute.</p> <p>Alternatively, you can return to the EtherCAT mode via the Multifunction button. Details can be found in section Switch between Ethernet Setup Mode and EtherCAT.</p>	<p>- Programming via web interface or on command level e.g. with Telnet</p> <p>➡ Go to Settings > System settings > Load & Save or click the Save settings button.</p>
<p>➡ Activate the Run mode.</p>		

Continue working in your PLC environment.

Service, Repair

If the sensor, controller or sensor cable is defective:

- If possible, save the current sensor settings in a parameter set to reload them into the controller after the repair.
- Please send us the affected parts for repair or exchange.

If the cause of a fault cannot be clearly identified, please send the entire measuring system to:

MICRO-EPSILON MESSTECHNIK
GmbH & Co. KG
Koenigbacher Straße 15
94496 Ortenburg / Germany
Tel. +49 (0) 8542 / 168-0
Fax +49 (0) 8542 / 168-90
info@micro-epsilon.com
www.micro-epsilon.com

Disclaimer

All components of the device have been checked and tested for functionality in the factory. However, should any defects occur despite careful quality control, these shall be reported immediately to MICRO-EPSILON or to your distributor/retailer.

MICRO-EPSILON undertakes no liability whatsoever for damage, loss or costs caused by or related in any way to the product, in particular consequential damage, e.g., due to

- non-observance of these instructions/this manual,
- improper use or improper handling (in particular due to improper installation, commissioning, operation and maintenance) of the product, repairs or modifications by third parties,
- the use of force or other handling by unqualified persons.

This limitation of liability also applies to defects resulting from normal wear and tear (e.g., to wearing parts) and in the event of non-compliance with the specified maintenance intervals (if applicable).

MICRO-EPSILON is exclusively responsible for repairs. It is not permitted to make unauthorized structural and / or technical modifications or alterations to the product. In the interest of further development, MICRO-EPSILON reserves the right to modify the design and the firmware.

In addition, the General Terms of Business of MICRO-EPSILON shall apply, which can be accessed under Legal details | Micro-Epsilon <https://www.micro-epsilon.com/legal-details/>.

Decommissioning, Disposal

In order to avoid the release of environmentally harmful substances and to ensure the reuse of valuable raw materials, we draw your attention to the following regulations and obligations:

- Remove all cables from the sensor and/or controller.
- Dispose of the sensor and/or controller, its components and accessories, as well as the packaging materials in compliance with the applicable country-specific waste treatment and disposal regulations of the region of use.
- You are obliged to comply with all relevant national laws and regulations

For Germany / the EU, the following (disposal) instructions apply in particular:

- Waste equipment marked with a crossed garbage can must not be disposed of with normal industrial waste (e.g. residual waste can or the yellow recycling bin) and must be disposed of separately. This avoids hazards to the environment due to incorrect disposal and ensures proper recycling of the old appliances.
- A list of national laws and contacts in the EU member states can be found at https://ec.europa.eu/environment/topics/waste-and-recycling/waste-electrical-and-electronic-equipment-weee_en. Here you can inform yourself about the respective national collection and return points.
- Old devices can also be returned for disposal to MICRO-EPSILON at the address given in the imprint at <https://www.micro-epsilon.com/legal-details/>.
- We would like to point out that you are responsible for deleting the measurement-specific and personal data on the old devices to be disposed of.
- Under the registration number WEEE-Reg.-Nr. DE28605721, we are registered at the foundation Elektro-Altgeräte Register, Nordostpark 72, 90411 Nuremberg, as a manufacturer of electrical and/or electronic equipment.



MICRO-EPSILON MESSTECHNIK GmbH & Co. KG
Koenigbacher Str. 15 · 94496 Ortenburg / Germany
Tel. +49 (0) 8542 / 168-0 · Fax +49 (0) 8542 / 168-90
info@micro-epsilon.com · www.micro-epsilon.com

Your local contact: www.micro-epsilon.com/contact/worldwide/

X9691458.07-A012036MSC

© MICRO-EPSILON MESSTECHNIK